

AES-GLOBAL i-GATE PRIME GSM GATE CONTROLLER SMS COMMANDS

SMS message	Description	Default value
	Caller ID features	
72number#	Store caller ID number.	N/A
,	Replace number with the user telephone	
	number.	
73number#	<u>Delete</u> caller ID number.	N/A
	Replace number with the user telephone	
	number.	
73*#	<u>Delete all</u> caller ID numbers.	N/A
Se	ervice & diagnostic messages	
*20#	Check reception level 1-31.	N/A
*21#	Check stored numbers. O = dial out number.	N/A
	I = dial in number. E = end of message.	
*23#	Call log of last 20 Caller ID numbers.	N/A
•	s outside of the automatic scheduling times	
1234#1#	Opens gate and closes automatically after	N/A
	traffic has passed through.	
1234#2#	Latch and hold gate open.	N/A
1234#3#	Unlatch and close gate.	N/A
	matic open and close scheduling	
1234*#	Deletes all automatic timing schedules	N/A
1234#2#mon,tue,wed,thu,fri#time#	Reinstated automatic opening schedule	House gate
	Replace time with 0730 for House gate (814)	opens at 07:30
	Replace time with 0645 for Yard gate (815)	Yard gate
		opens at 06:45
	1	1

For further assistance please contact us on 01354 278506.

Reinstated automatic closing schedule

Replace time with 1800 for House gate (814)

Replace time with 1800 for Yard gate (815)

House gate

Yard gate closes at 18:00

closes at 18:00

1234#3#mon,tue,wed,thu,fri#time#